

Touchpad Manual



User Guide

Colorado Time Systems

Corporate Office
1551 East 11th Street
Loveland, CO 80537 USA

Sales : 800-279-0111 or +1 970-667-1000

Service: 1-800-287-0653 x256 or +1 970-667-1000 x256
Service Fax: 970-667-1032

Web: www.coloradotime.com
Email: customerservice@coloradotime.com

Table of Contents

Introduction	1-1
Do's and Don'ts	2-1
Installing Your Touchpads	3-1
Gutter Mount	3-1
Flat Wall Mount	3-2
In-Water Check List	4-1
Troubleshooting Guide	5-1
Emergency Repairs	5-3
Using Your Meter	6-1
To Test Touchpad	6-1
To Test Cable Harness	6-2
To Test Deck Plates	6-3
To Test Pushbuttons	6-4
Using Your Needle/Vacuum Pump	7-1
To Release Air from a Touchpad	7-2
Care and Maintenance	8-1
Cleaning Cable Harness and Deck Plates ...	8-1
Cleaning Wall Plates	8-2
Touchpad BananaPlug Maintenance	8-3
Velcro Replacement	8-4
Storage	9-1
Servicing Your Touchpads	10-1

Introduction

Thank you for purchasing Colorado Time Systems touchpads.

Following are guidelines for easy installation, operation, care and storage of your touchpads. Please read this manual carefully and share it with all parties responsible for the operation and care of your touchpads. Make a copy of this manual and store it in a dry, safe place.

Save the boxes in which your touchpads were shipped for transporting them to other meet facilities or in case they need to be returned to the factory.

Before installing your touchpads, take a moment to inspect the pads for any possible damage incurred during shipping. If damages are visible, save the original shipping box and contact the responsible freight company immediately. If your pads are free of any damage, proceed to the installation instructions.

Note

Never handle your touchpads by the cable! This includes when adding air to or releasing air from the pads.

Scope of This Manual

This manual covers all aspects of normal touchpad installation and care. This manual also includes a Care and Maintenance section and a Troubleshooting section which cover the most common user-correctable problems and maintenance issues.

Two items may be helpful to you in maintaining your touchpads. These are available from Colorado Time Systems.

- touchpad test meter
- vacuum pump and needle

To find specific information quickly, refer to the Table of Contents at the front of this manual. For answers to installation questions or problems not covered here, call Colorado Time Systems' Customer Service Department (x256) at 970-667-1000 or toll free at 800-287-0653.

Do's and Don'ts

DO's

- ❑ **DO** treat your touchpads as valuable pieces of electronic equipment--they are! With proper care and handling, your pads will last indefinitely. Without proper care, they can be destroyed in a matter of months. (Your Warranty is voided if it is found that your touchpads have been abused through improper care and handling.)
- ❑ **DO** remove your touchpads from the water when not in use for extended periods of time. This is especially important when the pool is a multi-use facility and persons not familiar with the use of touchpads will be swimming.
- ❑ **DO** check out your touchpads in advance of a meet. This should be done to allow plenty of time to correct any possible malfunction and have the touchpads in perfect shape for the meet.
- ❑ **DO** assign a trustworthy person to be in charge of the touchpads. By having a student, assistant coach or aide responsible for the equipment, you can assure yourself that the equipment will be ready for use when it is needed.

DON'TS

- ❑ **DO NOT** pick up a touchpad by its cable. The cable is not as physically strong as its size indicates.
- ❑ **DO NOT** let your touchpads jam against the lane line hardware if they are gutter mounted. Check periodically to make sure the touchpads cannot shift into the line of the hardware.
- ❑ **DO NOT** allow temperatures to exceed 110° F or fall below 50° F while storing or transporting touchpads.
- ❑ **DO NOT** place touchpads in direct sunlight while out of the water (warping will occur).
- ❑ **DO NOT** allow touchpads to be bumped, scraped or twisted.
- ❑ **DO NOT** puncture the touchpad. Even a tiny hole in the front of the touchpad will allow water to enter and destroy the touchpad. Use venting needle ONLY in orange plug, NEVER in the touchpad front.


Installing Your Touchpads

Gutter Mount Installation


Note

No tools are required for gutter mount installation.

- 1) Prop up the touchpads at each starting block. Do not allow the front of the pad (black with white target) to rest against the starting block.
- 2) Beginning with the outside land, lay a link bracket on the gutter, Velcro® side up, equidistant between lanes one and two (see Figure 1).

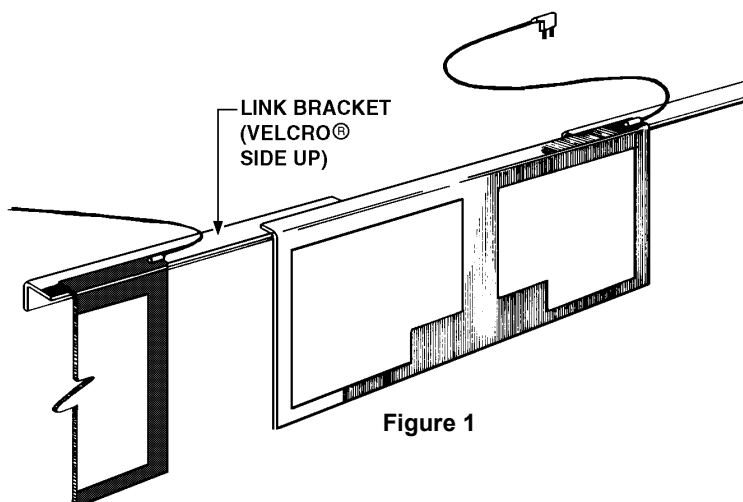

- 3) Ease the pad for lane one alongside the pool wall and into place. Press the pad down firmly to bond the Velcro® material (see Figure 2).
- 4) Repeat steps 2-3 for the remaining lanes.
- 5) Lift the outside end of the two outside lanes' pads and place a link bracket on the gutter, completely extending to the corner of the pool. Lower the pad and bond the Velcro®.

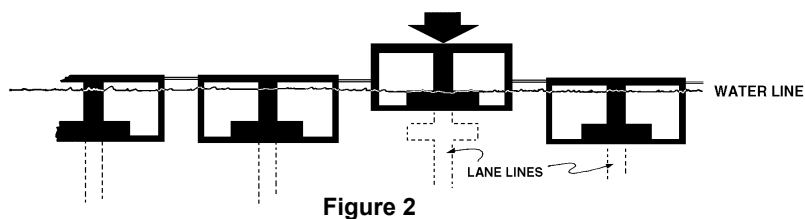

Note

It is very important that you install all applicable link brackets. Failure to place brackets between the outside two touchpads and their respective walls will result in an objectionable lateral movement of the pads during a meet.

**Tools & Materials
Required for Flat Wall
Mount Installation**

6) Repeat steps 1-5 for the opposite end of the pool if necessary.

The following parts are supplied by Colorado Time Systems:

- 2 Stainless steel flat wall mounting brackets for each touchpad
- 2 Stainless steel expansion bolts and 2 expansion anchors with expansion wedges for each touchpad to fit 1/2" holes
- 6 Stainless steel 1/4 - 20 x 1/2" mounting bolts

The following tools will be required:

- 9/16" socket or open end wrench for supplied 1/4" x 20 bolts
- Socket or open end wrench for bolts
- Drill motor with 1/2" masonry bit to fit anchors
- Hammer

**To Install Your Wall
Mounted Touchpads**

- 1) Mount two wall brackets to each touchpad, one on each end, using the supplied 1/4" - 20 x 1/2" stainless steel mounting bolts. The mounting brackets are pre-drilled and tapped.
- 2) Place one touchpad in the pool with the pad flush against the pool wall and centered in the swimming lane.
- 3) Once the pad is aligned, mark and drill a hole 1 1/2" deep in the pool deck at each bracket hole location.
- 4) Insert narrow end of expansion wedge into the bottom (serrated end) of the expansion anchor as far as you can easily push it.
- 5) Place expansion anchor in the drilled holes wedge first. The anchor should protrude 1/2" above the level of the pool deck. Pound the anchor into the hole until it is even with the pool deck. The expansion wedge will force the anchor to expand into the deck to secure the bolt.
- 6) Bolt the touchpad mounting brackets to the pool deck using the supplied 1/4 - 20 x 1" stainless steel bolts.
- 7) Put a number on the back side of each touchpad and always use that touchpad in that lane number to facilitate mounting.
- 8) Repeat steps 2-5 for the remaining touchpads.

Note

Replacement touchpad brackets are not included with touchpad orders and must be purchased separately.

In-Water Check List

After you have properly installed your touchpads, ensure they are operating properly by following these steps:

- 1) After you have mounted your touchpads in the water, test each touch pad with your touchpad meter. Working with one touchpad at a time, insert the touchpad plug into the test meter.
- 2) Have a swimmer trigger (fingertip touch) the touchpad while you observe the meter. The meter should light up completely from left to right indicating that the swimmer closed the switch contacts.
- 3) Repeat steps 1-2 for the remainder of the pads.
- 4) Once all the touchpads have been checked using the test meter, insert the touchpad plugs into their corresponding deck plate jacks (see Figure 6) or cable harness pod (see Figure 12).
- 5) Set your electronic swim timer for a 50-yard race. Reset the timer and start the race using any appropriate starting method. (Ensure your electronic swim timer arms all lanes for the finish).
- 6) Once all the lanes are armed, have a swimmer trigger the pad in lane one, then lane two and so on until all lanes have been triggered in order. If you have a printer installed, request a printout of finish results by lane order. Without a printer, request a console display of the finish results by lane.
- 7) Check to make sure that all times were recorded with lane one recording the fastest time. If the slowest time was recorded for lane one, check the lane reversal position on your timer.

Note

Your touchpads may require an initial adjustment in their sensitivity. This adjustment can be made by either adding air or releasing air from the pad. After you have made all necessary initial adjustments, your touchpads should not require any further adjustments.

Troubleshooting Guide

This section will assist you in identifying any touchpad problem(s) by learning to recognize the specific condition and remedy.

Note

Firm pads should feel similar to pushing your fingers into a thick magazine. Spongy pads give the sensation of pushing your fingers into a piece of foam rubber.

Condition	Appearance	Meter Readings	Problem	Correction	Remarks
Touchpad works correctly	Feels <i>Firm</i>	While touching pad entire bargraph is illuminated	No problem	Your pad is working correctly	Correctly operating pads should illuminate the bargraph
Touchpad works correctly	Feels <i>Firm</i>	When touchpad is not touched, bargraph should not illuminate	No problem	Your pad is working correctly	When the pad is not being touched the bargraph should not illuminate
	Feels <i>Spongy</i>	While touching pad entire bargraph is illuminated	Too much air in pad	If pad works take no action	See pad evacuation inst. sectn 7
	Feels <i>Spongy</i>	When touchpad is not touched, bargraph is not illuminated	Air pocket may be visible	If pad "floats" or becomes less sensitive to touch, you will need to evacuate the air	See pad evacuation instructions, section 7
Timer shows hit for the pad's lane within 15 seconds of the start	Feels <i>Firm</i>	While touching pad entire bargraph is illuminated	Excessive vacuum in the pad, too little air	Vent the pad to let more air in	See pad venting instructions, section 7
Timer shows hit for the pad's lane within 15 seconds of the start	Feels <i>Firm</i>	When touchpad is not touched, bargraph is not illuminated	If bargraph is illuminates when not touched, the pad is shorted.	Vent the pad to let more air in	See pad venting instructions, section 7
Venting pad does not correct the problem	Feels <i>Firm</i>	While touching pad entire bargraph is illuminated	Cable problem	Inspect cable	Wiggle cable at connector block, plug while observing meter
Venting pad does not correct the problem	Feels <i>Firm</i>	When touchpad is not touched, bargraph is not illuminated	If bargraphs are not illuminated, there could be water in the pad.	Contact CTS	

Condition	Appearance	Meter Readings	Problem	Correction	Remarks
Evacuating the air does not correct the problem		While touching pad entire bargraph is illuminated	Venting was not performed after pad was evacuated	Vent pad	See pad venting instructions, section 7
Evacuating the air does not correct the problem		When touchpad is not touched, bargraph should not illuminate	Venting was not performed after pad was evacuated	Vent pad	See pad venting instructions, section 7
Evacuating the air does not correct the problem	Feels <i>Spongy</i>	While touching pad entire bargraph is illuminated	Vacuum pump hose connected to the wrong air inlet	Review evacuation instructions	See pad evacuation instructions, section 7
Evacuating the air does not correct the problem	Feels <i>Spongy</i>	When touchpad is not touched, bargraph should not illuminate	Water is present in vacuum hose while evacuating	Contact CTS	Water may have entered the pad during venting
Pad never stops the timer at the finish (Split time not recorded)		While touching pad entire bargraph is illuminated	Broken wire in cable	Inspect cable	Wiggle cable at connector block and plug while checking for good meter reading
Pad never stops the timer at the finish (Split time not recorded)		When touchpad is not touched, bargraph is not illuminated	Dirty cable connector	Clean connector	Clean connectors See Care and Maintenance section
Pad never stops the timer at the finish (Split time not recorded)		When touchpad is not touched, bargraph is not illuminated	Pad cable damaged	Contact CTS	

Condition	Appearance	Problem	Correction
Venting pad does not correct problem	Inspect top of tape switch for visual damage or shifting of tape switch	Tape switch shorted due to physical damage	Attempt to "massage switch back into shape using the thumbs of both hands
Venting pad does not correct problem	Inspect top of tape switch for visual damage or shifting of tape switch	Tape switch shorted due to physical damage	An obvious dent in the switch may be able to be worked out using the massage method
Venting pad does not correct problem	Tape switch shorted due to excessive pressure pushing the switch below the radius of the pad	Tape switch shorted due to physical damage	If the tape switch has slipped below the radius, massaging the switch back into the radius should correct the problem

Emergency Repairs During a Race

Pad shorts showing a constant finish during the race

Only attempt if you do not have time to make the normal touchpad test listed under the Care and Maintenance section.

Take an absorbent towel and your touchpad needle to the pad. Dry off the end plug using the towel. **IMPORTANT:** Make sure the cable end of the touchpad is not splashed or doused with water while the adjustment is being made. Insert the needle into the end plug as described under the venting a touchpad, section 7. Insert the needle in the pad and wait 10 seconds. Remove the needle.

This procedure should only be attempted if no other means are available to correct the problem during a race. **DAMAGE TO THE PAD MAY RESULT.** If this procedure is used, the pad should be carefully tested following the meet to insure that too much air was not allowed to enter the pad.

Using Your Meter

To Test Touchpad

The touchpad test is used to make sure touchpads are operating properly.

- 1) Plug the dual banana plug from the touchpad into the top of the test meter.
- 2) Press the power button (located between the two banana prongs) on the bottom of the test meter.
 - When the touchpad is not being pressed, only the red power light should illuminate. None of the red bar graph lights should come on; if they do, you have a shorted touchpad (a touchpad that always sends a signal). Contact CTS customer support.
 - When a fingertip is pressed against the surface of the touchpad, the entire red bar graph should illuminate; if it does not, you have an open touchpad (a touchpad that will not send a signal). Contact CTS customer support.

If a touchpad is not operating properly, see the Troubleshooting Guide earlier in this manual.



Figure 3 - Touchpad Meter



Figure 4 - Touchpad Test

To Test Cable Harness

The cable harness test is used to determine the amount of voltage reaching a touchpad, pushbutton or RJP through the cable harness.

1. Connect the cable harness to the timer and turn on the timer.
2. Insert the test meter prongs into the receptacle labeled "PRIME" on the cable harness pod. When the test meter is plugged all the way into the cable harness, the cable harness depresses the power switch on the test meter, and the test meter's red power light will illuminate.
 - The red bar graph lights should illuminate in the 4.5 to 5 volt range.
 - A reading lower than 4.5 indicates a problem in the timer or cable harness, or a dirty connector. If you get a low reading, clean the cable harness connector as described in the Cleaning Deck Plates and Cable Harnesses Maintenance Sheet, and retest. If it continues to test low, contact CTS customer support.
3. Unplug the test meter and insert into the receptacle labeled "BUTTON" on the cable harness pod. Follow the same procedure as above to test.
4. Repeat these steps for each lane pod on the cable harness.

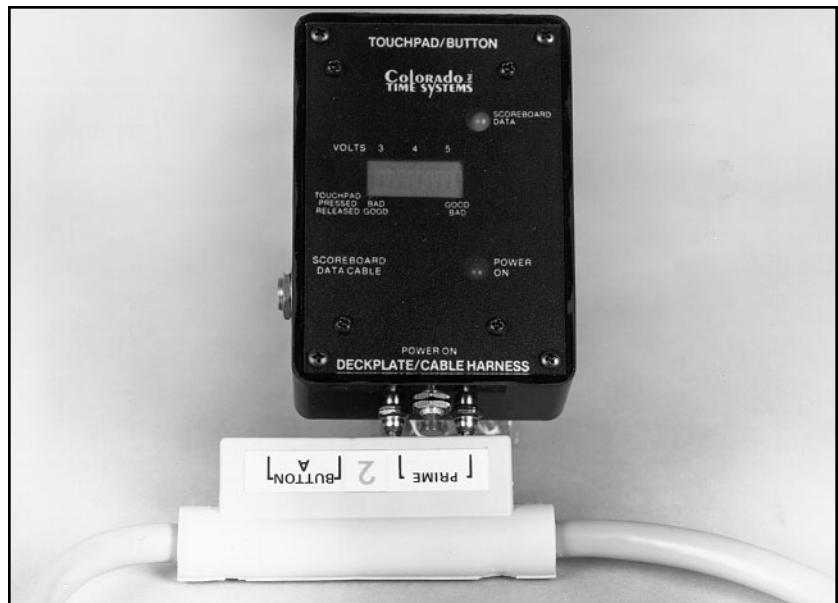


Figure 5 - Cable Harness Test

To Test Deck plates

The deck plate test is used to determine the amount of voltage reaching a touchpad, pushbutton or RJP through the deck plate or under-block connection hub.

1. Connect the timer to the wall plate and turn on the timer.
2. Insert the test meter prongs into the "TOUCHPAD" receptacle on the deck plate. When the test meter is plugged all the way into the deck plate, the power switch on the test meter is depressed, and the test meter's red power light will illuminate.
 - The red bar graph lights should illuminate in the 4.5 to 5 volt range.
 - A reading lower than 4.5 indicates a problem in the timer or deck plate, or a dirty connector. If you get a low reading, clean the deck plate connector as described in the Cleaning Deck Plates and Cable Harnesses Maintenance Sheet, and retest. If it continues to test low, contact CTS customer support.
3. Unplug the test meter and insert into the "BUTTON A (RJP)" receptacle on the deck plate. Follow the same procedure as above to test.
4. Repeat these steps for the BUTTON B and BUTTON C receptacles.
5. Repeat for each deck plate or connection hub.

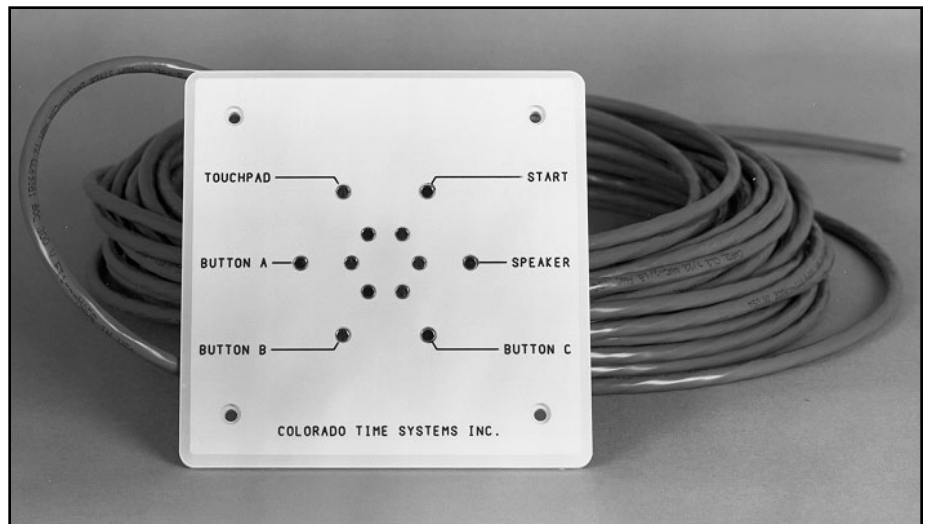


Figure 6 - Deck plate

To Test Pushbuttons

The pushbutton test is used to make sure the pushbuttons are operating properly.

- 1) Plug the dual banana plug from the pushbutton into the top of the test meter.
- 2) Press the power button (located between the two banana prongs) on the bottom of the test meter.
 - When the pushbutton is not being pressed, only the red power light should illuminate. None of the red bar graph lights should come on.
 - When the pushbutton is pressed, the entire red bar graph should illuminate.
- 3) If the pushbutton does not cause these readings in the meter, the pushbutton is faulty and should be replaced.

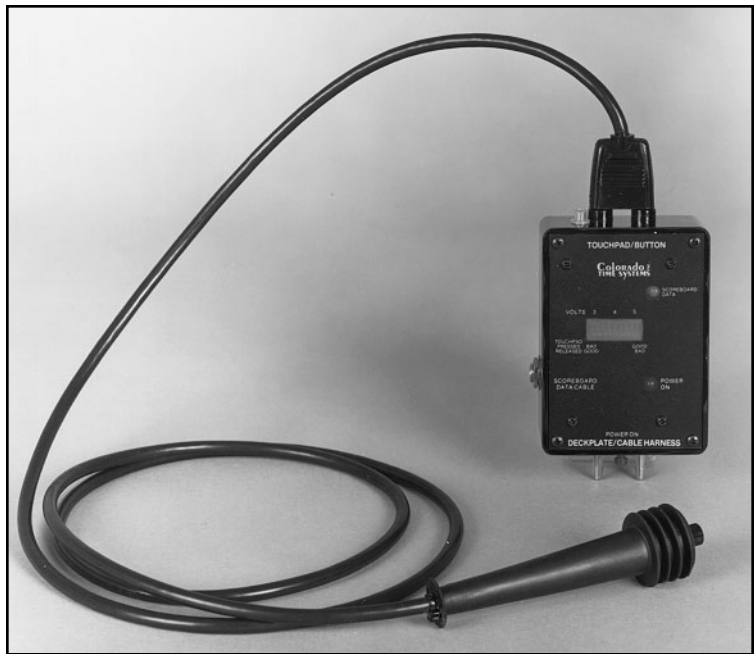


Figure 7 - Pushbutton Test

Using Your Needle/Vacuum Pump

If your touchpad always sends a signal to the swim timer, it is "shorted" and may need to have air added (**vented**) to it. Please consult the Troubleshooting Guide section or call a Colorado Time Systems' Customer Service technician (x256) at (970) 667-1000 or toll-free at 800-287-0653. If venting is recommended, follow these steps:

1) Air must be added to a touchpad while it is out of the water.

IMPORTANT: Make sure the cable end of the touchpad is not splashed or doused with water while the adjustment is being made.

Note

If air is added to the touchpad while in the water, water may get inside the touchpad. This will ruin the touchpad.

2) Insert the touchpad plug into the test meter (see Figure 3 and 4).

3) Ensure that the orange rubber plug on the connector block is completely dry (see Figure 9, next page).

4) Remove the needle from its receptacle on top of the touchpad meter. Ensure the needle is free of all burrs (a rough edge that can be removed by drawing the needle across a stone or concrete surface, rotating the needle as you move it).

5) Insert the needle into the orange plug as far as it will go. **BE CAREFUL NOT TO PUSH THE NEEDLE TOO HARD.** Leave the needle in the orange plug until the red meter lights are off. Wait three seconds and remove the needle (See Figure 8).

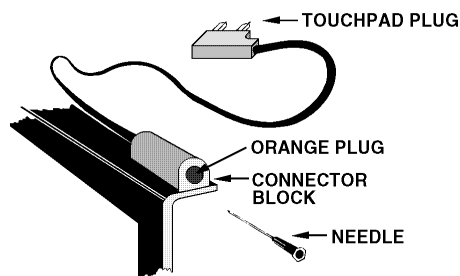


Figure 8



Figure 9 - Connector Block

- 7) If adding air to the touchpad does not result in the above meter reading, refer to the Care and Maintenance section.

Note

**To Release Air
From A Touchpad**

Never handle your touchpads by the cable. This includes when adding air to or releasing air from the pads.

If your touchpad will not send a signal to the electronic swim timer while fingertip touched, it is "open" and may need to have air released (**evacuated**) from it. Please consult the Troubleshooting Guide section in this manual or call a CTS Customer Service Technician (x256) at (970) 667-1000 or toll-free at (800) 287-0653 for assistance. If evacuating is recommended, follow these steps:

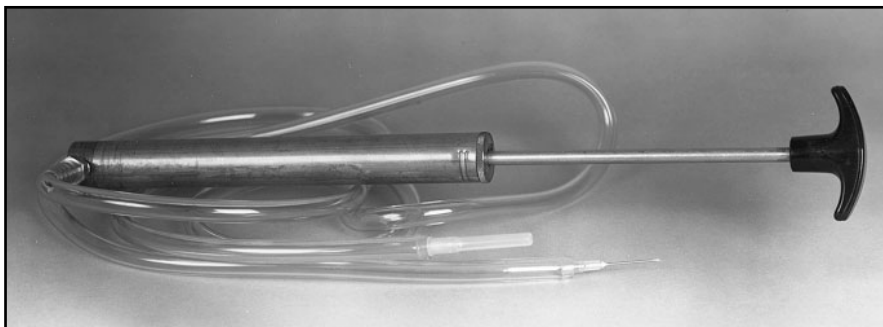


Figure 10 - Vacuum Pump

- 1) Remove the touchpad from the water.
- 2) Insert the touchpad plug into the touchpad test meter.
- 3) Ensure that the orange rubber plug on the connector block is completely dry.
- 4) Identify the vacuum side of your pump. Looking at the bottom of the pump, the hose connected to the port at the bottom side of the molded arrow is the vacuum hose (see Figures 10 and 11).

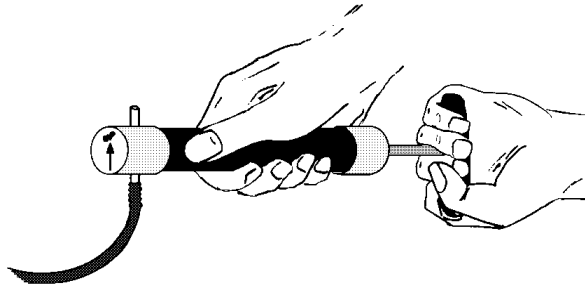


Figure 11

Note

Place two or three drops of oil into the oil hole at the top of the pump to keep action smooth.

- 5) Remove the needle from its receptacle on top of the touchpad meter. Ensure the needle is free of all burrs. A burr or rough edge on the needle, can be removed by drawing the needle across a stone or concrete surface, rotating the needle as you move it.
- 6) Attach the needle to the clear plastic hose on the vacuum side of the pump.
- 7) Insert the needle into the orange plug as far as it will go. **BE CAREFUL NOT TO PUSH THE NEEDLE TOO HARD.**
- 8) Hold the hand pump with arrow up. Using full even strokes, pump until the test meter lights up red completely from right to left. At this point, the touchpad switch mechanism is fully closed. Stop pumping and wait until the meter lights begin to go off from right to left. Wait five seconds and remove the needle from the orange plug.
- 9) Replace the needle in its receptacle on top of the touchpad meter.

Care and Maintenance

Cleaning Your Cable Harness and Deck Plates

Cable Harness and Deck Plate Sockets (See Figures 12 and 13)

Materials Needed

- 100% Cotton Pipe Cleaners or Single Wrap Cotton Swabs
- Lime-A-Way® Kitchen/Bathroom Cleaner (available at most grocery stores)
- Water
- Dow Corning® #111 Silicon Grease or equivalent (available at most hardware stores)

Note

NEVER USE A SHARP OBJECT TO CLEAN SOCKETS OR CONNECTORS



Figure 12 - Cable Harness

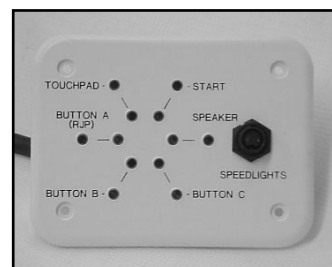


Figure 13 - Deck Plate (Quick Connect)

- 1) Dip pipe cleaner folded in half or cotton swab in Lime-A-Way® Kitchen/Bathroom Cleaner and twist into the socket, (see Figure 14).

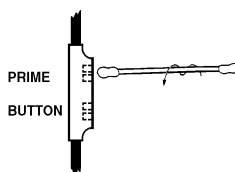


Figure 14 - Cleaning Sockets

- 2) Clean thoroughly by rotating the pipe cleaner or swab in the socket.
- 3) Use water to completely rinse the socket.
- 4) Next, use a clean, dry pipe cleaner or swab to soak up excess water in the socket.
- 5) Apply a small amount of silicon grease to a clean, dry pipe cleaner or cotton swab and twist into the socket.

Note

If you have the quick connect deck plate with speedlight connector (Figure 13), clean speedlight connector with rubbing alcohol only. Clean 50-pin connectors (Figure 15) with rubbing alcohol as well. **DO NOT USE LIME-A-WAY® Kitchen/Bathroom Cleaner** for either of these.



Figure 15 - 50-Pin Connectors

Cleaning Your Wall Plates

Wall Plate Sockets

Materials Needed

- Toothbrush
- Rubbing Alcohol

- 1) Use a toothbrush coated with rubbing alcohol to clean the wall plate (Figure 16) by gently rotating the toothbrush bristles in the over the connection sockets. There is no need to rinse with water because the alcohol will evaporate.

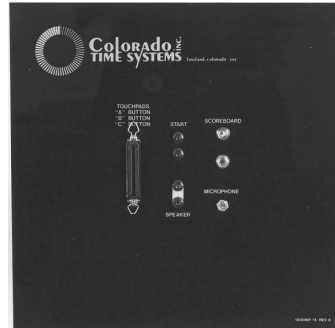


Figure 16 - Wall Plate

Touchpad Banana Plug Maintenance

The two pronged plug on the end of the cord coming out of the touchpad connector block needs to be kept free of corrosion for proper operation. This banana plug can be cleaned or replaced if necessary.

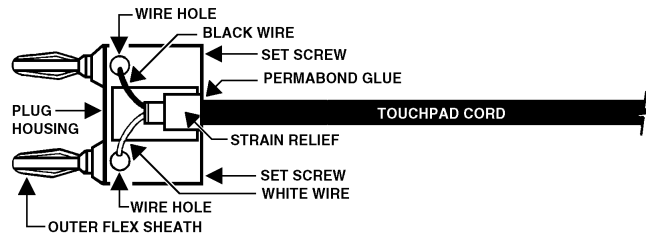


Figure 17 - Banana Plug

Cleaning Banana Plug

Materials Needed

- Toothbrush
- 100% Cotton Pipe Cleaners or Single Wrap Cotton Swabs
- Lime-A-Way® Kitchen/Bathroom Cleaner
- Water

- 1) To clean the banana plug, fill a small cup with Lime-A-Way® to the depth of the prongs, about one inch.
- 2) Immerse the prongs of the plug in the Lime-A-Way® for about two minutes.
- 3) Remove the plug from the cup. Using a toothbrush, gently brush the prongs, making sure to remove any corrosion from under the outer sheath of the prongs.
- 4) Fill a cup with water, swirl prongs in cup and soak for a few minutes. Then dry.

Replacing Banana Plug

Materials Needed

- Banana plug(s)
- Wire strippers
- Small blade screwdriver
- Silicon sealer
- Permabond glue

If the plug is badly corroded, bent or any section of the outer sheath is missing, the plug will need to be replaced. Plugs may be ordered from Colorado Time Systems (part# 025-045).

- 1) Clip off the old plug just above the plug housing (see Figure 17).
- 2) Strip the outer black insulation off the cord about one inch from the end, exposing the two smaller wires, one black, the other white.
- 3) Strip the insulation off the black and white wires about 1/4 inch from their ends. Twist the exposed wires into a single strand on the black wire and then the white wire.

- 4) Insert the cord into the strain relief hole on the front of the plug.
- 5) Using a small blade screwdriver, loosen the two set screws recessed into the top of the plug so that the screw ends clear the wire holes.
- 6) Insert the end of the black wire into one hole and tighten the set screw. Insert the white wire into the other hole and tighten that set screw.
- 7) Place silicon sealer in wire holes.
- 8) Put a drop of permabond glue on the cord just above where it enters the strain relief. Allow to dry for at least one hour.

Velcro Replacement®

The Velcro® on your touchpads and brackets may become loose or worn and require replacement. The Velcro® for the touchpads (the loop, part # 580-004) and the brackets (the hook; part # 580-022) and the adhesive (part # 530-010) may be ordered from Colorado Time Systems.

Applying Velcro® Adhesive

- 1) Completely remove the old Velcro® and clean the old adhesive off the bracket or touchpad. A latex paint thinner will help loosen any old adhesive and allow you to scrape the adhesive off with a putty knife.
- 2) Apply Velcro® adhesive to the bracket or touchpad with a paint brush. Make sure that the width of the Velcro® strip is covered with adhesive.
- 3) Apply the Velcro® strip to the bracket or touchpad. Rub down firmly several times or use a small roller to remove any air pockets on the Velcro® strip. (Air pockets can cause the adhesive to dry out and the Velcro® the loosen).
- 4) Allow the adhesive to dry overnight.

Note

If you touchpad brackets require replacement, please call our Customer Service Department (x256) at 970-667-1000 or toll-free at 800-287-0653 for ordering information.

Storage

Properly storing your touchpads is very important to their longevity. By following the guidelines below, you can reduce the chance of damaging or destroying your pads.

- 1) Ensure your pads are stored away from heavy traffic.
- 2) Hard objects or other touchpads should not rest against the surface of the pad or the tape switch located on the 90° angle. Do not expose your pads to the abuse of the table corners, hand rails, door latches or other potentially harmful objects.
- 3) Touchpads should not be stored in temperatures lower than 50° F or higher than 110° F. If the touchpads are allowed to get too cold, let them soak in the warm pool water for 15-30 minutes before use.
- 4) Exposure to direct sunlight and/or temperatures over 110° F will result in irreparable damage from sun or heat warpage.

Colorado Time Systems has a touchpad caddy Model CAD-TP/P (see Figure 18 below), available for storing your touchpads. The caddy provides safe storage and a convenient means to transport your touchpads to the pool deck. If you choose to build your own caddy, we will provide free building plans. For more information, contact your CTS Sales Representative.



Figure 18 - Touchpad Caddy

Servicing Your Touchpads

If you are unable to restore your malfunctioning touchpad to proper operation, please call our Customer Service Department (x256) at 970-667-1000 or toll-free at 800-287-0653. One of our technicians will help analyze your system problem and make recommendations for repair.

If it is necessary to return your touchpad(s) to the factory, the technician will provide shipping instructions and return authorization information. Make sure any package you send to CTS sufficiently protects the contents and contains your organization, customer number, name, street address and daytime phone number.

Normal transit time within the continental U.S. for most carriers is five business days each way. If you require a quicker turnaround, please inform the technician so they can suggest a faster shipping method.

SHIP TO:

Colorado Time Systems
Customer Service Department
1551 East 11th Street
Loveland, CO 80537-5056

Phone: 970-667-1000 x256

FAX: 970-667-1032

Customer Service: 800-287-0653 x256

